


Silverware Holder

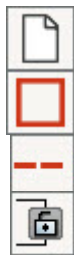

Setting Up the File

- Open a New Blank Design.
- Select the Rectangle tool in the Digitize Toolbox.
- Select the Single Outline. Create a rectangle.
- Press Esc.
- Select the Rectangle.
- Make sure Proportional Scaling is unlocked.
- Change the Width to 5.5" and the Height to 10.5" (For larger Knife: 5.5" x 11.5").
- Press Enter.

Create the Tackdown Line



- Select the rectangle.
- Select Copy; then Paste.
- Change the color to a contrast color.
- Change the dimensions to 5" x 10" in the Transform Toolbar. (For larger knife: 5" x 11").



- Right click on Show Grid.
 - ◆ Place a dot in Show Design Grid.
 - ◆ Check Snap to Grid.
 - ◆ Change the Horizontal and Vertical Grid dimensions to .5".
 - ◆ Press OK.
- Left click on Show Grid.
- Select Ctrl + A.
- Move the large rectangle to align with a horizontal grid line. The smaller rectangle will move with the large one since it is also selected.

Placement Line for Pocket Fold



- Select the Open Object tool.
- Select the Single Outline.
- Change to another color.
- Digitize a short horizontal line 9.5 grids up from the bottom across the right side using two left clicks. (For larger knife, set the line at 10.5 grids up).
- Repeat for the left side.

Insert the Embroidery Design



- Select Insert Embroidery.
- Navigate to the saved design, Silverware Design.
- Place the bottom of the design just below the placement lines for the pocket.
- With the silverware design selected, hold the Ctrl key and click on large rectangle.



- Select Align Centers Vertically.

NOTES:




The smaller dimensions are for a knife that measures 9" in length; for larger knives, use the measurements in parenthesis.

Cut fabric and knit interfacing dimensions:

- ◆ For smaller knives: 6" x 20"
- ◆ For larger knives: 6" x 22"

Cut lining dimensions:

- ◆ For smaller knives: 6" x 10.5"
- ◆ For larger knives: 6" x 11.5"

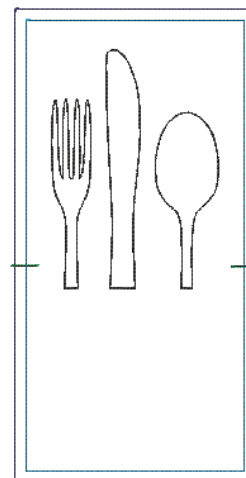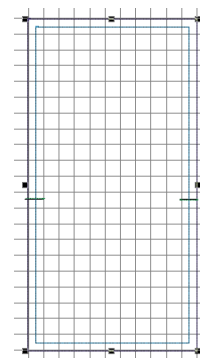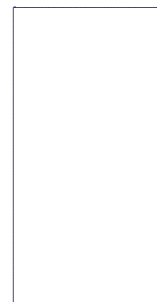

Pocket Tackdown




- Select the Open Object tool. Select another color.
- Digitize the next shape with four left clicks.
- Begin just inside the smaller rectangle just below the pocket fold line on the left side; click in the lower left corner just inside the smaller rectangle; click in the lower right corner; and click just below the pocket fold line on the right.
- Press Enter.

Pocket Separation Lines



- Select the Open Object tool. Select another color.
- Select the Sculptured Outline.
- Digitize two lines with two left clicks; then press Enter.
- The first line will be placed between the fork and the knife.
- The second will be placed between the knife and the spoon.

Lining Tackdown

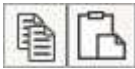

- Select the first rectangle.
- Select Copy; then Paste. Select another color.
- Change the width to 4.75" and the Height to 9.5". (For a larger knife, 4.75" x 10.5").
- Deactivate the grid.
- Select the copied rectangle.
- To create an opening for turning, select the Knife.
- Digitize across the bottom of the rectangle with left clicks, a bit in from each corner. See illustration.
- Select the cut line and press Delete.
- Select File> Save As and name the design Silverware Holder.

Stitching the Design

- Stitch the placement line on Stabil Stick Tear Away.
- Place the top edge of the fabric along the top edge of the placement line and make sure the vertical edges of the fabric extend equally beyond the vertical placement lines.
- Stitch the tackdown around the holder.
- Stitch the pocket fold line placement lines.
- Fold the remaining fabric in half and create a crease by finger pressing.
- Match the fold to the placement lines for the pocket. Tape in place with Tear Away Tape.
- Stitch the pocket tackdown around the lower portion of the holder.
- You may wish to place tape over the fold line of the pocket to hold the edge. Stitch the pocket separation lines.
- Place the lining on top of the holder, right sides together.
- Stitch the lining tackdown.
- Remove the stabilizer and trim the holder. Trim the seam allowances to different widths to lessen the bulk.
- Turn right side out and press.
- Slipstitch the opening and press.

NOTES:

